

HKN-MP160 spare parts list

Part No.	Part Name	Qty
1	Blade	1
2	Convex ring	1
3	Graphite ring spring	1
4	Graphite ring	1
5	Ceramic ring	1
6	Ceramic ring sleeve	1
7	Knife protector	1
8	Bearing sleeve	1
9	Seal ring	2
10	W688Z Bearing	2
	W688Z Bearing	2
11	S/S tube	1
12	Output axis	1
13	Spline	1
14	Plastic head housing	1
15	Spline sleeve	1
16	Bearing	2
17	Rotor	1
20	Stator	1
18	Brush barrel	2
18-1	Brush cover	2
19	Brush	2
21	PCB Speed control board	1
22	Left and right housing	1
23	Rubber interlocking protector	1
24	Pressing board	1
25	Speed control key	1
26	Pressing board screw	2
27	Switch osculant staff	1
28	Housing screw	8
29-1	Screw plunger 28-1	1
29-2	Screw plunger 28-2	1
29-3	Screw plunger 28-3	1
29-4	Screw plunger 28-4	1
29-5	Screw plunger 28-5	1
29-6	Screw plunger 28-6	1
30	Cable sheath	1
31	Power cord	1

